

INSPECTION AND MAINTENANCE

MAINTENANCE SCHEDULE

Perform maintenance according to time interval.

■ ENGINE

Item \ Interval	Every 500 km or 1 month	Every 2500 km or 6 months	Every 5000 km or 12 months
Air cleaner element	—	Clean	—
Exhaust pipe nuts and muffler bolts ★	Tighten	Tighten	—
Valve clearance ★	Inspect	—	Inspect
Spark plug	—	—	Inspect
	Replace every 18 months		
Fuel hose ★	—	Inspect	—
	Replace every 4 years		
Engine oil and oil filter	Replace	—	Replace
Engine oil hoses	Inspect	Inspect	—
Spark arrester	—	—	Clean
Throttle cable	Inspect	Inspect	—
Idle speed ★	Inspect	Inspect	—
Clutch ★	Inspect	—	Inspect
Engine coolant ★	Replace every 2 years		
Radiator hoses ★	—	—	Inspect
	Replace every 4 years		

■ CHASSIS

Item \ Interval	Initial 1 month	Every 3 months	Every 6 months
Drive chain ★	Inspect every time before riding		
Brakes ★	Inspect	Inspect	—
Brake hose ★	—	—	Inspect
	Replace every 4 years		
Brake fluid ★	—	Inspect	—
	Replace every 2 years		
Tires	—	Inspect	—
Steering ★	Inspect	Inspect	—
Suspensions ★	—	—	Inspect
Front and Rear wheel set nuts	Tighten every time before riding		
Rear axle nut and lock nut ★	Tighten	Tighten	—
Chassis nuts and bolts ★	Tighten	Tighten	—
General lubrication	Lubricate	Lubricate	—

N O T E

★ = Ask your Hyosung dealer or qualified mechanic to do the maintenance items marked.